



[www.elektrogas.valve-zone.com](http://www.elektrogas.valve-zone.com)

---

**MIXFLOW – ENERGY**  
80 – 314 Gdańsk,  
Al. Grunwaldzka 303  
Tel: +48 58 676 55 39  
[elektrogas@mixflow.com.pl](mailto:elektrogas@mixflow.com.pl)



Autoryzowany Przedstawiciel marki: elektrogas®



## R - RF

**Regulators for gas  
with filter and safety diaphragm**

# R - RF

## Regulators for gas with filter and safety diaphragm

### Contents

Description .....	2
Features .....	2
Functioning and application .....	3
Technical specifications .....	4
Gas flow chart (pressure drop) .....	6
Selection.....	9
Ordering information .....	10
Special versions and optionals .....	10
Design, installation and servicing .....	10
Standards and approvals .....	11

### Description

The R type is a regulator for gas pipelines according to EN 88. It can be equipped with an integrated filter (type RF) according to DIN3386. This device is suitable for supplying clean gas at stable pressure to all the devices downstream.

### Features

The regulators are made of aluminum alloy die-cast.

They are equipped with adjustable spring, so that outlet pressure can be precisely adjusted on site.

Regulators can also be equipped with a filter element with a very high holding capacity of dust and impurities (filtration grade <50µm). Filter structure consists in a steel support frame covered with a double-layer high-performance nonwoven made of polyolefin fibers. Thanks to that, moving parts of regulator and other devices downstream are fully protected.

Regulators are equipped with working and safety diaphragms, hence it is not necessary to connect outside the vent line.

The closing plate is balanced with a specific compensating diaphragm, resulting in a very stable outlet pressure.

The impulse line is integrated inside the regulator. Special versions with external impulse line are available on request.

Pipe connections meet group 2.

R - RF regulators have been designed to generate low pressure drop with high flow.

The governors have the ability to lock up when there is no flow.

Suitable for use with air and non-aggressive gases included in the 1, 2 and 3 families (EN 437). Special versions for aggressive gases (Biogas, COG).

Provided with pressure test points on two sides in the inlet (after the filter cartridge) and outlet chamber to connect manometers, pressure switches or other gas equipments.

All components are designed to withstand any mechanical, chemical and thermal condition occurring during typical service. Effective impregnation and surface treatments have been used to improve mechanical sturdiness, sealing and resistance to corrosion of components.

Regulators are 100% tested and fully warranted.

## Functioning and application

A regulator is a device able to maintain a stable pressure at the outlet, despite of changes of inlet pressure and/or gas flow rate. The outlet pressure pushes on the working diaphragm, acting against the spring. The disc moves until force of spring and outlet pressure are equal. If the flow decreases, e.g. because a downstream valve has been closed, a small increase in outlet pressure occurs, so the disc moves to reach a new position, balanced between outlet pressure and spring. If higher outlet pressure is needed, the regulating screw must be tightened, increasing the force of spring. Variation of inlet pressure does not affect outlet pressure because the closing plate is compensated with the compensating diaphragm. If the flow stops, the outlet pressure increases just slightly, as the disc has a gasket and closes perfectly the passage.

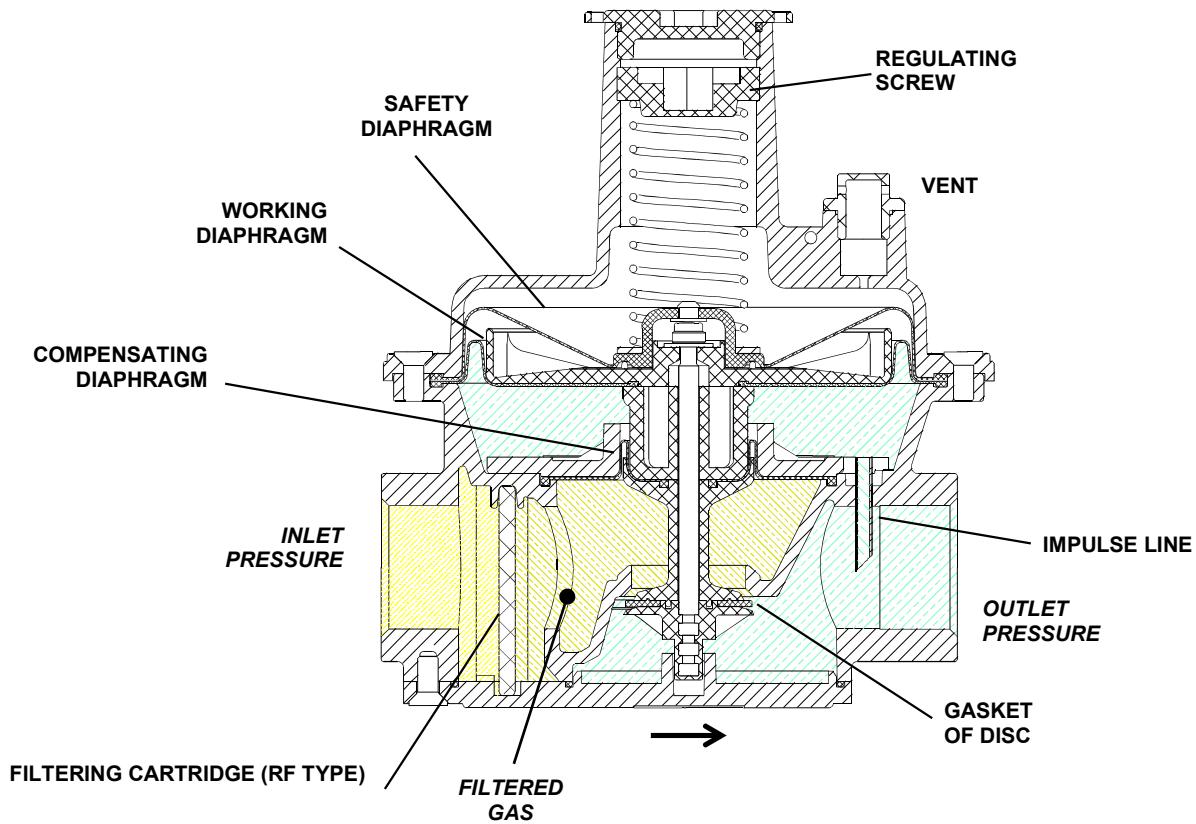


Fig.1

This device is normally installed in gas trains, industrial applications and gas firing systems.

Figure 2 shows an example of installation with other Elektrogas devices.

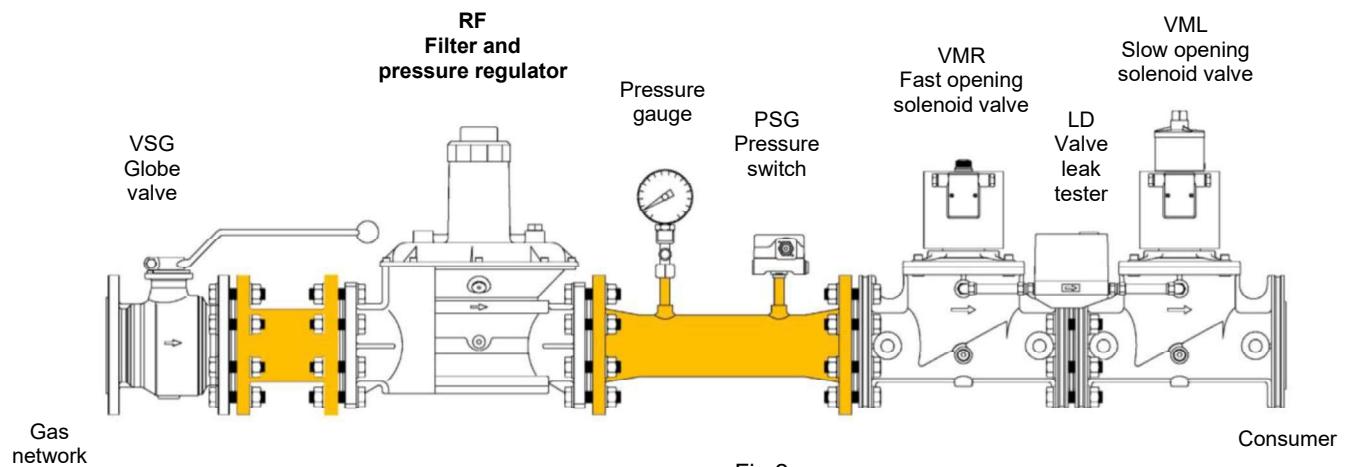


Fig.2

## Technical specifications

Tab. 1

<b>Connections</b>	Gas threaded F/F ISO 7-1 from Rp1/2 to Rp2 or ANSI-ASME B1.20 from 1/2" NPT to 2" NPT
	Flanged PN16 – ISO 7005 DN40 – DN100
<b>Ambient temperature</b>	-15°C ... +60°C
<b>Inlet-Outlet pressure</b>	<p><b>R or RF models</b>            Inlet pressure: Max 500mbar (50 KPa) or Pout + 5mbar            Testing pressure: max 750 mbar – outlet 500mbar</p> <p><b>Regulating class:</b> Class A - EN88 (<math>\pm 1</math>mbar or <math>\pm 15\%</math> of set value)</p> <p><b>For Outlet pressure see Tab. 2</b></p>
<b>Lock up pressure</b>	SG30 for lock-up (+7.5mbar or +30% of set value)
<b>Flow capacity</b>	see charts
<b>Filtration grade</b>	RF (filtering cartridge): $\leq 50 \mu\text{m}$
<b>Installation</b>	<p><math>\frac{1}{2}''</math>-2": horizontal (with settable spring upward) or vertical pipeline</p> <p>2<math>\frac{1}{2}</math>-3"-4": only horizontal pipeline (with settable spring upward)</p>
<b>Gas type</b>	Air, natural gas, town gas, LPG (gaseous) of families 1,2,3 (EN437)
<b>Materials in contact with gas</b>	Aluminum alloy, Brass, Stainless steel, Plated steel, Polyamide, Anaerobic adhesive, Nitrile rubber (NBR), Fluoro elastomer (FPM), Polytetrafluoroethylene (PTFE)
<b>Specifications of J version for biogas or COG</b>	Seals made of Fluoroelastomer (FPM) instead of NBR

### OUTLET PRESSURE RANGE (mbar):

Tab. 2

	<i>Model</i>	<b>R..1</b>	<b>R..2 R..3</b>	<b>R..35</b>	<b>R..4 R..6</b>	<b>R..7 R..8 R..9</b>
<b>Spring color</b>						
<b>Green</b>	...A..	9-18	9-16	5-13	9-18	5-13
<b>Red</b>	...B..	15-30	13-26	7-20	15-30	7-20
<b>Neutral</b>	...C..	25-60	20-40	10-30	25-60	10-30
<b>Yellow</b>	...D..	50-120	30-60	25-70	50-120	25-70
<b>Violet</b>	...E..	100-250	50-100	60-150	100-250	60-150
<b>Orange</b>	...F..	-	80-160	140-300	-	140-300
<b>Blue</b>	...G..	-	125-250	-	-	-

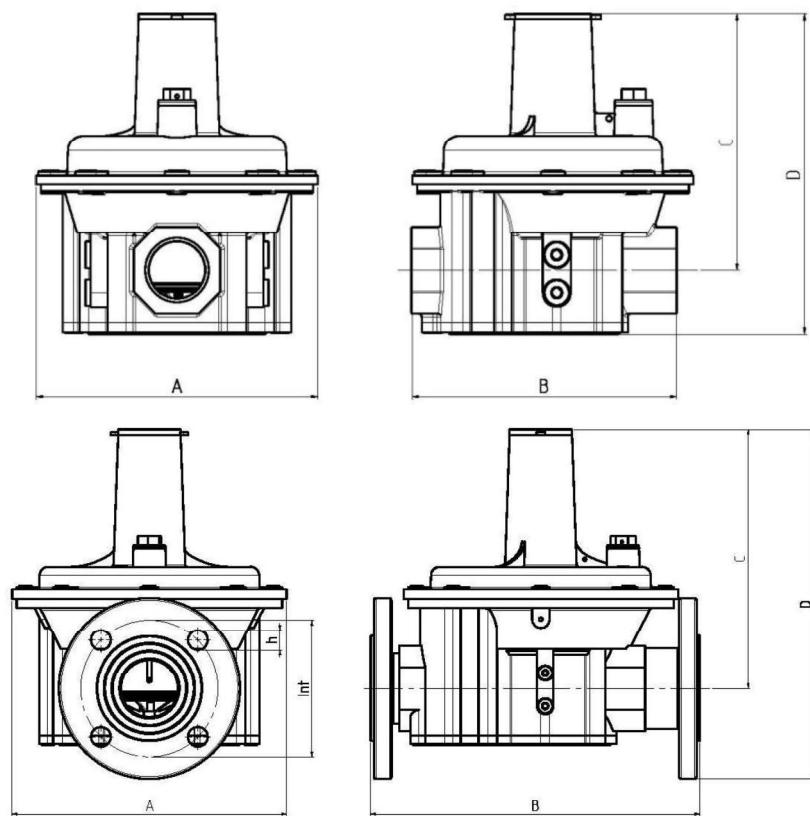


Fig.3

Tab. 3

Model	Connection	Overall dimensions [mm]						Weight (Kg)
		A	B	C	D	Int	h	
R..1	1/2"	96	105	111	147	-	-	0,60
R..2	3/4"	150	141.5	137	171	-	-	1,45
R..3	1"	150	141.5	137	171	-	-	1,45
R..35	1 1/4"	192	194	214	255	-	-	3,10
R..4	1 1/2"	250	236	267	316	-	-	5,00
R..6	2"	250	236	267	316	-	-	5,00
R..4F <sup>1</sup>	DN40 fl.	250	311	214	285	110	4x18	7,30
R..6F <sup>1</sup>	DN50 fl.	250	352	267	350	125	4x18	7,50
R..7	DN65 fl.	325	430	335	430	145	4x18	12,5
R..8	DN80 fl.	325	430	335	430	160	8x18	12,5
R..9	DN100 fl.	325	430	335	430	180	8x18	12,5

(<sup>1</sup>) with flanged connection kit mounted

**Flow chart with disc blocked in open position**

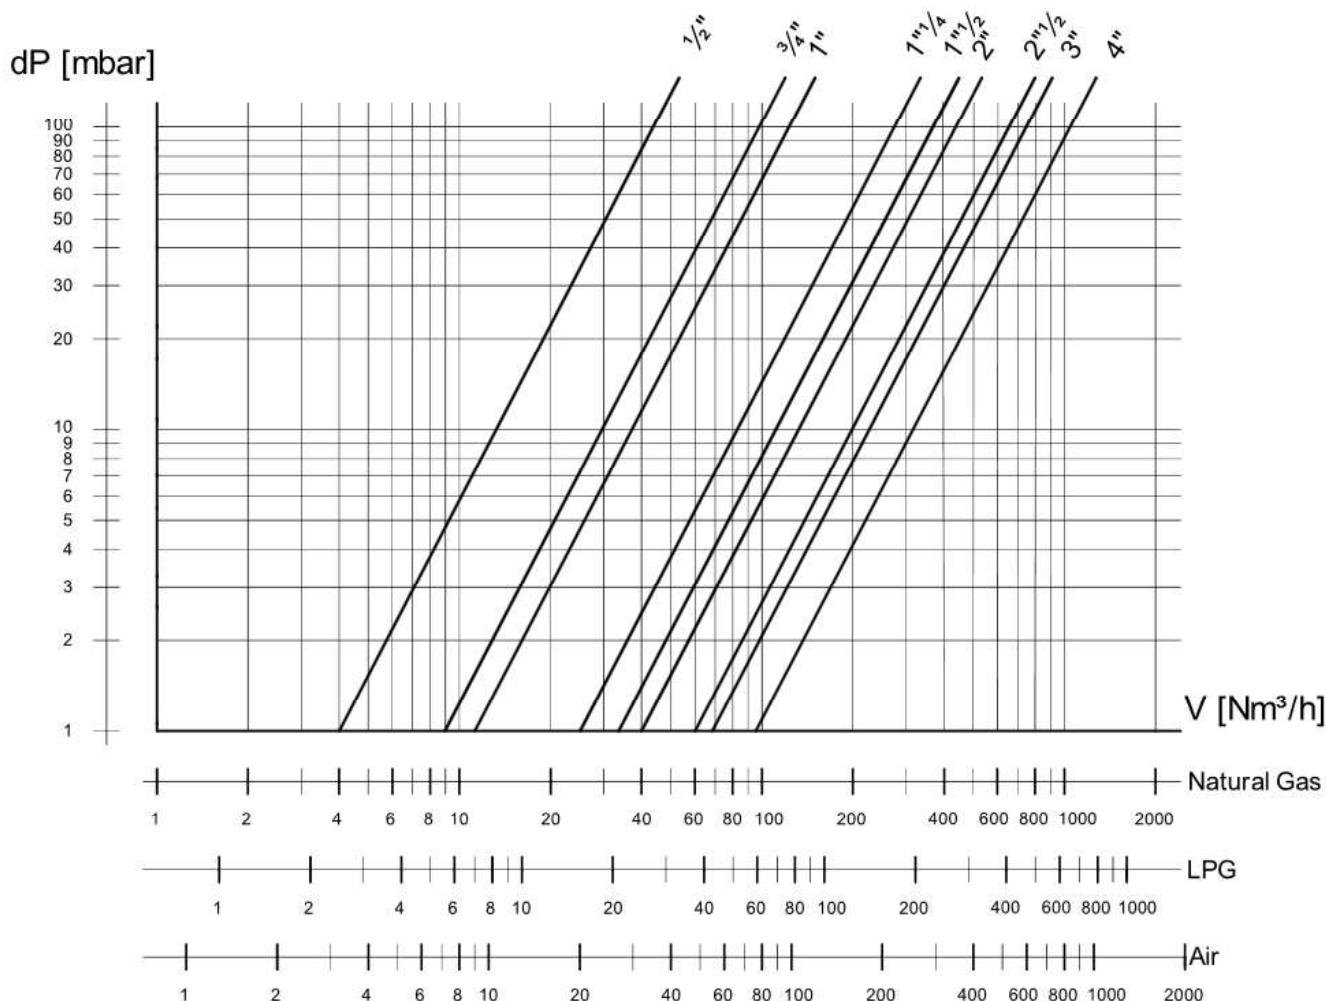


Fig. 4

**Conversion of flow from air to other gases**

Tab. 4

$$V_{GAS} = k \cdot V_{AIR}$$

Gas type	Density $\rho$ (typical value) [Kg/m <sup>3</sup> ]	$k = \sqrt{\frac{1.25}{\rho_{GAS}}}$
Natural gas	0,80	1,25
LPG	2,08	0,77
Air	1,25	1,00

## Selection

To select a regulator consider:

- **gaseous media (natural gas, LPG,...)**
- **inlet pressure**
- **outlet pressure**
- **requested flow**

The regulator will work properly if:

- requested flow is lower than maximum flow  $V_{max}$  with available pressure drop and adequate margin (advisable +40% for outlet pressure higher 40 mbar and +80% for outlet pressure lower 20mbar);
- requested flow is higher than minimum flow  $V_{min}$  of regulator with available pressure drop. The minimum flow is equal to 1/10 of maximum flow  $V_{max}$ .

To avoid noise and excessive turbulence, the gas speed at outlet pipe should be not higher than 30 m/s, otherwise the next bigger size of outlet pipe should be chosen.

*Example:*

Select a regulator :

- for Natural Gas ( $CH_4$ )
- inlet pressure 80mbar
- outlet pressure 15 mbar
- max flow 45  $Nm^3/h$

Considering inlet and outlet pressure, the available pressure drop is:  
 $80 - 15 = 65$ mbar.

In the Flow chart of disc in open position (fig. 4), we can see the maximum flow of a regulator.

Regulators that can be suitable are:

-R..2 3/4" with  $V_{max}$  80  $Nm^3/h$

-R..3 1" with  $V_{max}$  100  $Nm^3/h$

and the margin for correct working is:

for

R..2 3/4"

$80 / 45 = +77\%$

for

R..3 1"

$100 / 45 = +120\%$

As outlet pressure is 15mbar, minimum margin is +80%, so R..3 is the correct solution.


We check that requested flow is higher than minimum flow:

$$V_{min} = V_{max} / 10 = 100 / 10 = 10 \text{ } Nm^3/h < 50 \text{ } Nm^3/h \text{ requested}$$

We calculate the gas speed at outlet to avoid noise:

Pipe 1", internal diameter 28mm, speed 19 m/s

The regulator will work well.

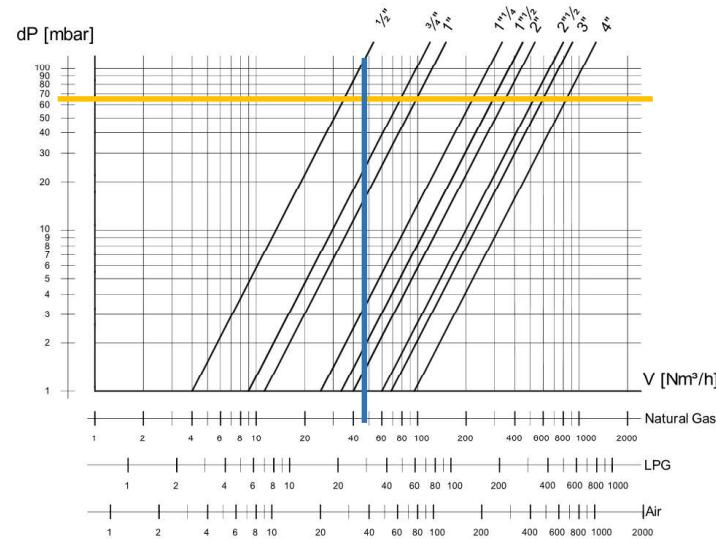

## Ordering information

	<b>RF</b>	<b>3</b>	<b>B</b>																																				
<b>Regulator type</b>																																							
R = regulator																																							
RF = regulator with filter																																							
<b>Connections size</b>																																							
1 Rp1/2																																							
1N 1/2"NPT																																							
2 Rp3/4																																							
2N 3/4"NPT																																							
3 Rp1																																							
3N 1"NPT																																							
35 Rp1½																																							
4 Rp1½																																							
4N 1"½NPT																																							
6 Rp2																																							
6N 2"NPT																																							
4F DN40																																							
6F DN50																																							
7 DN 65																																							
8 DN80																																							
9 DN100																																							
<b>Outlet pressure (mbar)</b>																																							
<table> <thead> <tr> <th><b>R..1</b></th> <th><b>R..2-3</b></th> <th><b>R..4-6</b></th> <th><b>R35</b> 7-8-9</th> </tr> <tr> <th colspan="2"></th> <th><b>4F-6F</b></th> <th></th> </tr> </thead> <tbody> <tr> <td>A 9-18</td> <td>9-16</td> <td>9-18</td> <td>5-13</td> </tr> <tr> <td>B 15-30</td> <td>13-26</td> <td>15-30</td> <td>7-20</td> </tr> <tr> <td>C 25-60</td> <td>20-40</td> <td>25-60</td> <td>10-30</td> </tr> <tr> <td>D 50-120</td> <td>30-60</td> <td>50-120</td> <td>25-70</td> </tr> <tr> <td>E 100-250</td> <td>50-100</td> <td>100-250</td> <td>60-150</td> </tr> <tr> <td>F</td> <td>80-160</td> <td></td> <td>140-300</td> </tr> <tr> <td>G</td> <td>125-250</td> <td></td> <td></td> </tr> </tbody> </table>				<b>R..1</b>	<b>R..2-3</b>	<b>R..4-6</b>	<b>R35</b> 7-8-9			<b>4F-6F</b>		A 9-18	9-16	9-18	5-13	B 15-30	13-26	15-30	7-20	C 25-60	20-40	25-60	10-30	D 50-120	30-60	50-120	25-70	E 100-250	50-100	100-250	60-150	F	80-160		140-300	G	125-250		
<b>R..1</b>	<b>R..2-3</b>	<b>R..4-6</b>	<b>R35</b> 7-8-9																																				
		<b>4F-6F</b>																																					
A 9-18	9-16	9-18	5-13																																				
B 15-30	13-26	15-30	7-20																																				
C 25-60	20-40	25-60	10-30																																				
D 50-120	30-60	50-120	25-70																																				
E 100-250	50-100	100-250	60-150																																				
F	80-160		140-300																																				
G	125-250																																						
<b>Special version</b>																																							
- standard																																							
.J version for bio and coke gas																																							

Example: **RF3B**: regulator with connection Rp1, filtering cartridge and outlet pressure 13-26mbar

## Special versions

Regulators can be supplied in special versions for aggressive gases such as Biogas and COG (version J), see Tab. 2 for technical features. It is recommended to check compatibility of gas contents and regulator materials before installation.

Regulators can be supplied in special versions for higher inlet pressure (1 bar or 2 bar), contact our sales office for further details.

## Design, installation and service

To assure a proper and safe operation, as well as a long service life of the regulator, consider the following recommendations:

- ✓ Ensure that all the features of your system comply with the specifications of the regulator (gas type, operating pressure, flow rate, ambient temperature, etc.).

- ✓ Governor till 2" may be mounted with spring in horizontal or vertical position (dome upward). In the event of vertical pipe, the flow direction should be from bottom to top. Governor larger than 2" can be mounted only with spring in vertical position (horizontal pipe) and dome upward.
- ✓ Avoid to install the regulator in the open air, ensure that installing area is dry, especially the vent cap has to be free from dirty and water.
- ✓ Make sure all works are performed by qualified technicians only and in compliance with local and national codes.
- ✓ After removing the end caps, make sure no foreign body will enter into the governor during handling or installation (e.g. swarf or excessive sealing agent). Manage the device with proper tools.
- ✓ Perform leak and functional tests after mounting (see Tab. 1 for max. testing pressure).
- ✓ To adjust the spring, remove the protective cap and turn the adjusting screw with an Allen key. Turning clockwise the outlet pressure increases, counterclockwise it decreases. After adjustment, remount protective cap.
- ✓ To change the spring: remove the protective cap and the adjusting screw, remove the original spring and put the new one, reassemble in reverse order, set the new spring. Stick the label with new outlet pressure.
- ✓ The regulator needs no maintenance, only the filter can be cleaned or replaced. We recommend to perform an external and functional check at least once a year. Twice in case of biogas or COG.
- ✓ To clean or replace the filter:
  - Shut off the gas.
  - decompress the spring, turning counter-clockwise the adjusting screw to the minimum position.
  - open the inferior cover using a proper key.
  - extract the filtering cartridge or the metallic filter. Pay attention to eventual dirt before the filter, it has to be remove before removing the cartridge.
  - clean it with compressed air or replace with a new identical one. Due to the features of the material of filtering cartridge, compressed air is not able to clean perfectly it as dirt is blocked inside fibbers, only a new cartridge can give optimal performance.
  - remount every parts in inverse sequence. Pay attention to insert the rod of closing element in the hole of the cover during reassembly.
  - Perform leak test.
  - set the outlet pressure to the right value and perform a functional test
- ✓ Due to rubber seals aging, to ensure safe operation, we recommend the replacement after 10 years from the date of manufacture printed on the product.
- ✓ This device must be installed in compliance with the rules in force.

For more details see the [Installation and Service Instructions](#).



## Standards and approvals

The regulators are designed and manufactured according to European norm EN 88-1.

Quality Management System is certified according to UNI EN ISO 9001.

